


THE SHOT CLOCK

Electronic Scoreboards Australia SHOT CLOCK TIMER

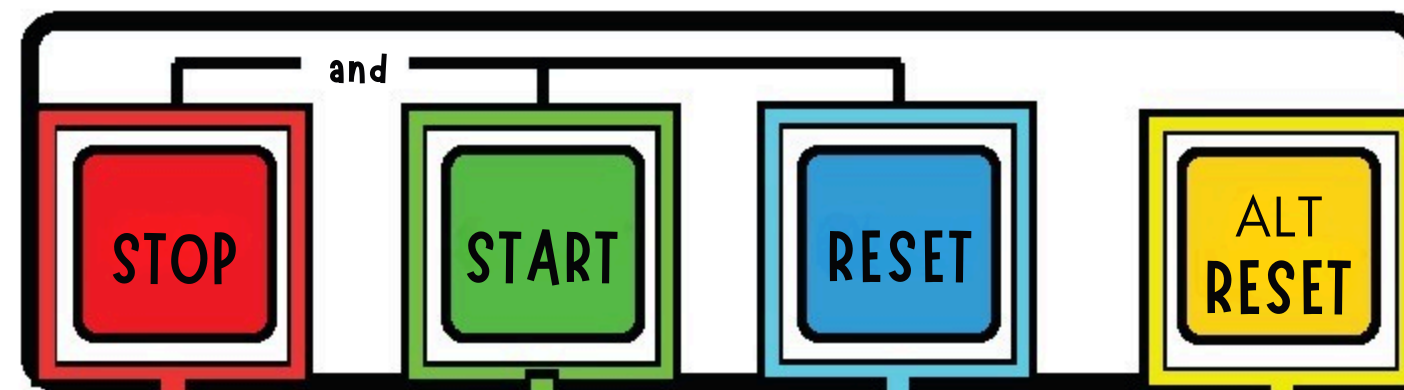

STOP
pauses shot clock

To adjust time, press and hold STOP then +1 or -1

START
starts shot clock

RESETS SC to 28secs

RESETS SC to 18 secs

To blank display while shot is in progress press and hold RESET button

When do I reset to 18/28?

18 second reset

- A corner/2m throw
- If a shot rebounds off the goal/ a blocker/ the goalie, and goes back the attacking team
- If there is an exclusion and there is less than 18 seconds on the shot clock
- Pretty much whenever the ball goes back to the attacking team!

28 second reset

- If there is a change of possession



Water Polo
WESTERN AUSTRALIA